



Haakili

Operation and Installation Guide

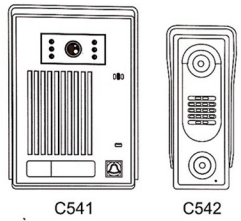

C541

C542

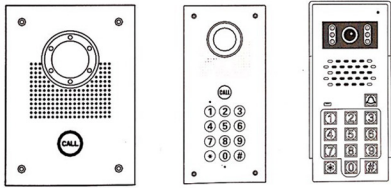

C543


C543KP

C541KP


*Luxurious in appearance
Unparalleled in technology*

OUTDOOR STATION


■ C541

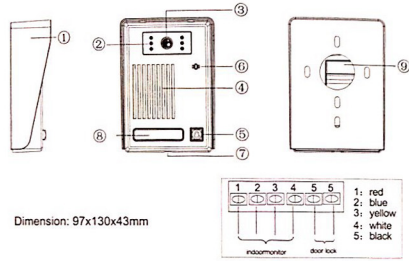


■ C542

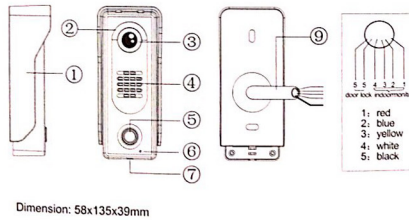


■ C543

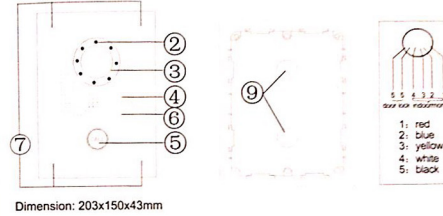

■ C543KP

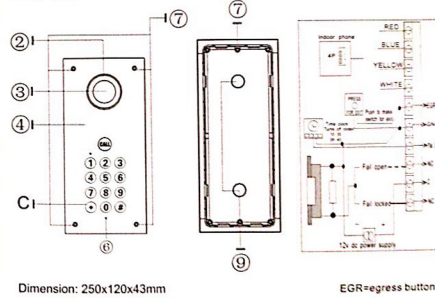

■ C541KP

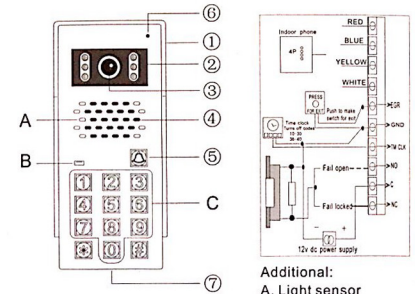


NO	NAME	DESCRIPTION
①	Water Cover	Protect the camera from outside water
②	LED Assistant	Provide lighting during night time for better visibility.
③	CCD Camera	Capture the image to sent to the monitor
④	Speaker	Sound from the monitor is delivered
⑤	Calling Button	Call the indoor phone to communicate
⑥	Microphone	Delivers and sound voice when communication with the indoor phone
⑦	Screw Hole	Install the screws
⑧	Nameplate	Show residential name
⑨	Connection wiring	Connection with the monitor

Specification

Power	DC14.5V
Electric current	Working ≤ 200mA
Camera lens	1/3 CCD 72 degree
Illumination	0.05LUX
Communication duration	120s
Communication method	Two-way
Working Temperature	-20-55°C
IP rating	55

 Specifications of C541KP/C543KP series code access



⚠ ATTENTION

- 1: Input a 4 Digit Password To Have The Door Striked Or The Lock Unlocked.
- 2: The Original Factory Defaulted Password Is *1234.

KEYPAD COMMAND (C543KP C541KP)

Default master code:1234
 Entering programming mode
 1:Press the * then 4 digit master code
 2:If successful three tones will sound and the LED will flash

Adding user codes
 1:Enter programming mode
 2:Input the code 01-31 for normal operation, 32-40 for latching mode.
 3:Enter the 4 digit code,if successful three tones sound if not 2 tones sound.
 4:Press * to exit

Deleting a user code
 1:Enter programming mode
 2:Enter code 01-40
 3:Press # to delete code
 4:If successful three tones will sound
 5:Press * to exit

Deleting a code from an unknown code
 1:Enter programming mode
 2:Press # two tones will sound
 3:Input 4 digit code to be deleted
 4:Three tones will sound if successful
 5:Press * to exit

Deleting all codes
 1:Enter programming mode
 2:Press # two tones will sound
 3:Press # again to hear a further two tones
 4:Press # seven times to default all codes and settings (the master code will remain)
 5:The system will resume after five seconds and tones

Changing the master code
 1:Down power the unit
 2:Hold * and power up the unit, a long tone will sound
 3:When the tone stops, a short tone will sound and input the new 4 digit programming code

Set the lock time
 1:Enter programming
 2:Enter 00
 3:Enter the lock/delay operation time (01-99 seconds)
 4:Press * to exit