
Video door phone system USER MANUAL

For the model with 100 pictures stored

Luxurious in appearance

Unparalleled in technology

C CE FC RoHS X

 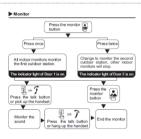


Call transferring(some models do not have such functions.)



Notice: When the outdoor station 1 calls the indoor monitor and the call is transferred, the indoor monitor can not exit the system manually. It will exit the system automatically after 2 minutes.

INSTALLING DIAGRAM



 Non-wired cable. ② Diameter≥0.5mm², from outdoor station to the farthest monitor distance≤70m. 2. Each monitor should be parallel connected. One

monitor can be extended 3 monitors as maximum extension. One monitor can be connected 2 outdoor stations as maximum.


3. Handset monitor only has 2 functional buttons.


Hand-free monitor only has 2 functional buttons, not available for transferring-call function.

 Built-in power supply video door phone can working with input AC voltage directly. Non-built-in power. supply needs plus a power supply the specification is DC 14.5V 1.3A.

CONFIGURATION DIAGRAM

► WITH TWO ENTRANCES

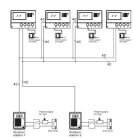

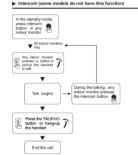

Password masking function(some models do not have this function

Some outdoor station can be connected with timer device (users purchase). When the timer device is activated and the line is connected, the passwords in the position 10-20 and 36-40 will be blocked. It means the passwords stop working.

SPECIFICATION Power DC 14 5V Illumination/minis 0.05 LUX 120s Communication duration Communication method Duplex communication Working temperature -20°C~+55°C IP rating 55

①	on
	trast
(3) es Talking (7) de Talking volu	
	me
4 Calling	

Picture memory function

For the model with 100 pictures stored

Auto capture

When the outdoor station calls the indoor monitor, one nicture will be contured in the 3rd second. It only contures one picture automatically (Do not support automatic continuity capture).



NOTICE

Maximum storage: 100 pictures. After the number reaches 100, the oldest picture will be deleted

If there are new pictures without read, picture indicator is on. After the pictures are read, the picture indicator will be off

Check picture

Press ★ and ♣ directly to enter the picture review window. Then press ★ and ♣ to choose the pictures up and down. Press (5) to exit. The indoor monitor will automatically return to the standby state in 10 seconds.

WIRING DIAGRAM



Delete picture

In the standby mode, press III as Picture 1. Press III to choose. Choose delete all as Picture 2. Press ★ or ♣ to delete all stored pictures.



Picture 2

Brightness adjustment

In the standby mode, press III as Picture 1. Then press or 4 to adjust the brightness. Range of brightness: 0-100. After the setting, press d to exit.

Contrast adjustment

In the standby mode, press III as Picture 1. Then press

 
to choose Contrast, press

or

to adjust the contrast. Range of contrast: 0-100. After the setting press to exit

SYSTEM DIAGRAM

▶ Wiring connection



INSTRUCTION:

- I. Cables :
- ② Wire≥0.2mm¹, from outdoor station to the farthest monitor distance≤28m. Wire≥0.2mm², from outdoor station to the farthest monitor distance≤50m. Wire≥0.5mm², from outdoor station to the farthest monitor distance≤70m.
- Maximum 4 indoor monitors and 2 outdoor stations for narallel connection 3. Handset indoor monitor with two function buttons and hands-free indoor monitor with three function buttons do not contain, transferring
- indoor monitor with three function buttons do not contain transferring or intercom functions.

 4. Every indoor monitor needs power: 14.5V, 1.3A (except build-in 5. The distance, between owners upply to indoor monitor.

 Wies 0.5 mm²; the distance/plack and white indoor monitor; which is distance, and indoor monitor is distanced, and with indoor monitor (Sim. Wires 0.5 smm²), the distance/plack and white indoor monitor (Sim. Wires 0.5 smm²). The distance/plack indoor monitor (Sim. Wires 0.5 smm²).

Chroma adjustment

In the standby mode, press @ as Picture 1. Then press @ to choose Chroma Press • or • to adjust the Chroma. Range of colour: 0-100. After the setting, press

Language setting

the language. After the setting, press 🖒 to exit.

In the standby mode, press 📵 as picture 1. Then press 📵 to choose Date (Date displays: year-month-date). Press ★ or ➡ to adjust the year. After year is adjusted, press (i) to switch to month. After month is adjusted, press 🔠 to switch to date. After the setting, press 🖒 to

Time setting

In the standby mode, press @as picture 1. Then press @ to choose Time (Time displays: hour : minute : second). Press ★ or ♣ to adjust the hour. After hour is adjusted, press ⊞ to switch to minute. Press ★ or ♣ to adjust the minute. After minute is adjusted, press in to switch to second. Press ★ or ♣ to adjust the second. After the setting, press d to exit.

OPERATION

▶ Visitor calls



Exit the setting mode

In the setting mode, press ∰ , choose Exit, press ★ or ♣ to exit. Or in the setting mode, press (5) to exit directly. Or it will automatically exit without any operation in 10 eaconde